




5) As shown in Picture 5, place 2No 5.0x100mm Screws into a predrilled hole on the seat block, and screw them in. Repeat this step for all seat blocks and repeat for the other seat.

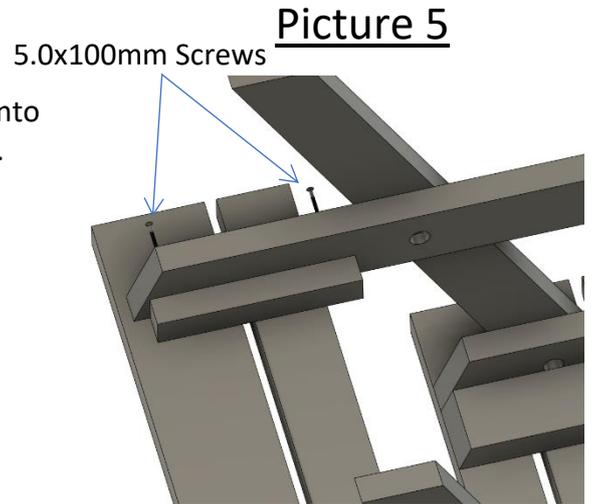

6) Place the Angle Brace in the middle of the Centre Cross Brace, as shown in Picture 6. Predrill and screw 2No 5.0x70mm Screws into the Angle Brace as shown in Picture 7. Repeat this step on the other side for both Angle Braces.

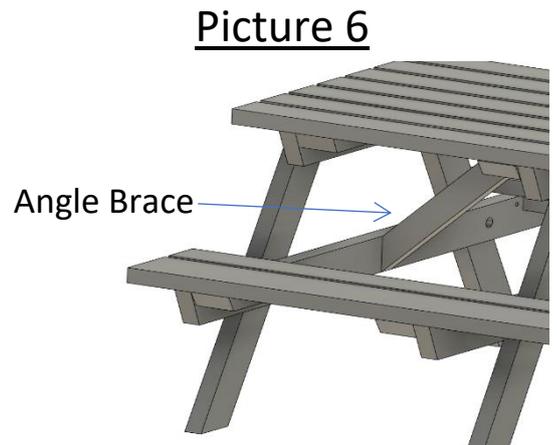

7) After you have completed all the steps the bench should look as shown in Picture 8.

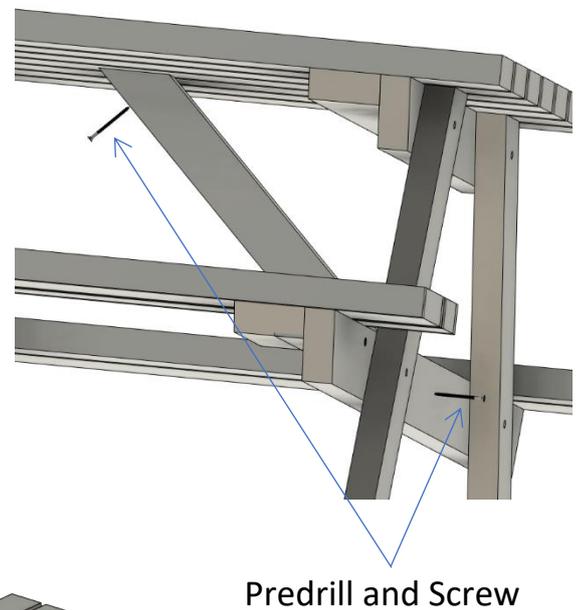

Picture 8




PICNIC BENCHES



Assembly Instruction for Plastic Rectangle Picnic Bench (2-person assembly recommended)

Basic tools required: Cordless screwdriver/drill-Pozidrive no2 bit, 4mm wood drill bit, 13mm socket or spanner.

Component List:

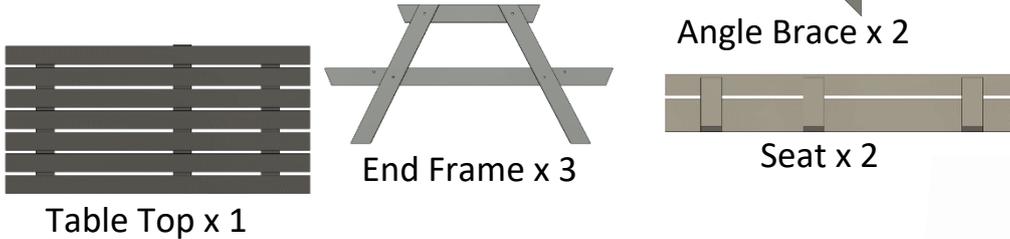


Fixing List:


4No 5.0x70mm Screws

21No 5.0x100mm Screws


- 1) Check the component list, making sure that you have everything required.

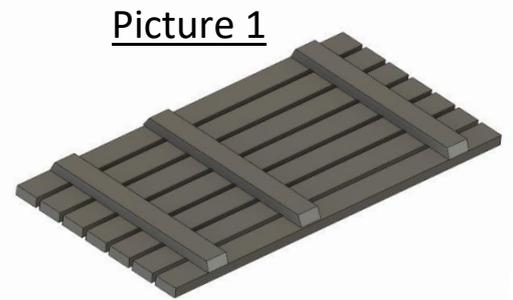

- 2) Place the table top on the floor upside down as shown as Picture 1. After this, take the end frame sections and place them on the outside of the table framework as shown in Picture 2, with more detail in Picture 3.

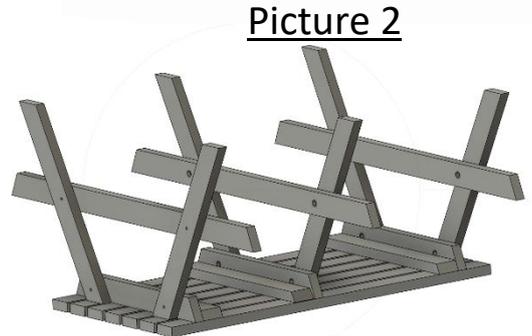

- 3) Pre-drill and screw 3No 5.0x100mm Screws into the End Frame as shown in Picture 3. Repeat this step for all End Frame Sections.

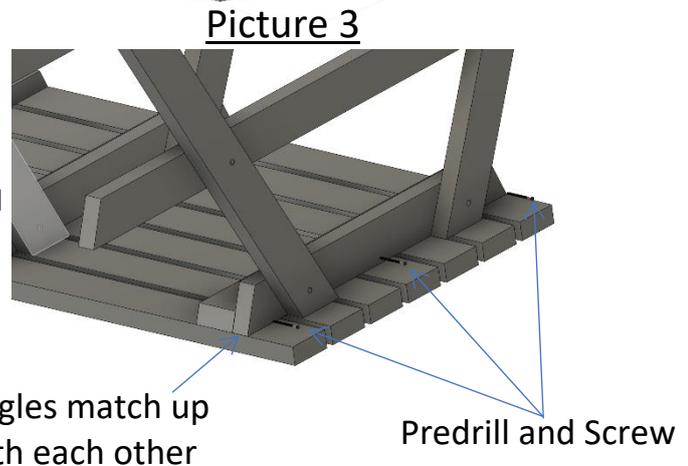

- 4) Flip the table over so that the bench looks like Picture 4. Then place the seats with the outside seat framework being on the inside of the End Frame.

