



PICNIC BENCHES



Assembly Instruction for 3-Seater Merlin Bench (2-person assembly recommended)

Basic tools required: Cordless screwdriver/drill-Pozidrive no2 bit, 4mm wood drill bit,

13mm socket or spanner.

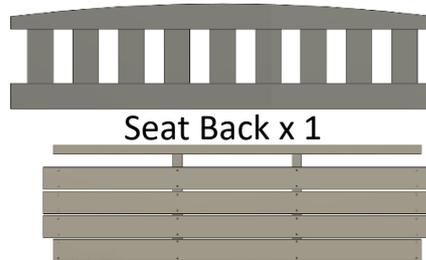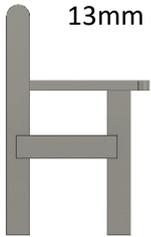

Seat Back x 1



Seat Base x 1

R/H End Frame x 1 L/H End Frame x 1

Fixing List:


24No 5.0x70mm Screws

4No 100mm Washer Head Screws

Picture 1




Picture 2

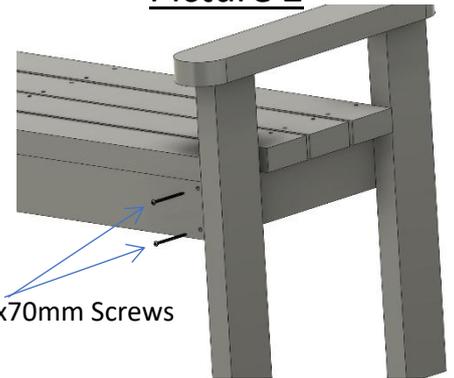


2No 5.0x70mm Screws

Picture 3

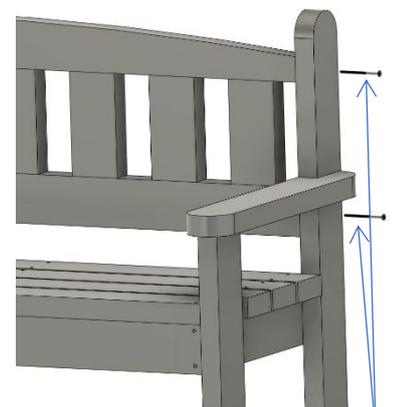

2No x 100mm Screws

Picture 4

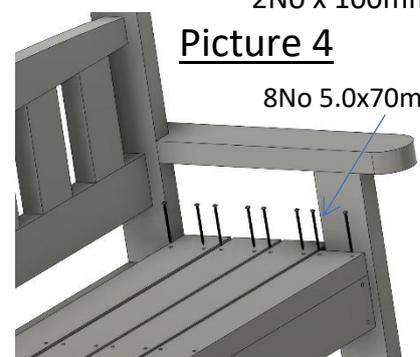

8No 5.0x70mm Screws

Picture 5



- 1) Check the component and fixing list ensuring that you have all the required items.
- 2) Stand 2 End Frames and place the Seat Base onto the end frame as shown in Picture 1. Once this has been done take 2No 5.0x70mm screws and screw them into the predrilled holes as shown in Picture 2. Repeat this for both sides.
- 3) Take 2No 100mm screws and screw them into the 2 pre-drilled holes in the end frame so that they are just protruding through the other side, after this place the seat back onto the screw and tighten. Repeat this for both sides.
- 4) Next, get 8No 5.0x70mm Screws and screw them into the predrilled holes on the Seat Base as shown in Picture 4. Repeat this for both sides and then as shown in Picture 2 take 2No 5.0x70mm Screws but screw into the predrilled holes at the back of the seat base instead of the front.
- 5) Once all steps have been completed the bench should look as shown in Picture 5.