



4) Place the Angle Brace in the middle of the Centre Cross Brace, as shown in Picture 4. Pre-drill and screw 2No 5.0x70mm Screws into the Angle Brace as shown in Picture 5. Repeat this step on the other side for both Angle Braces.

Picture 4

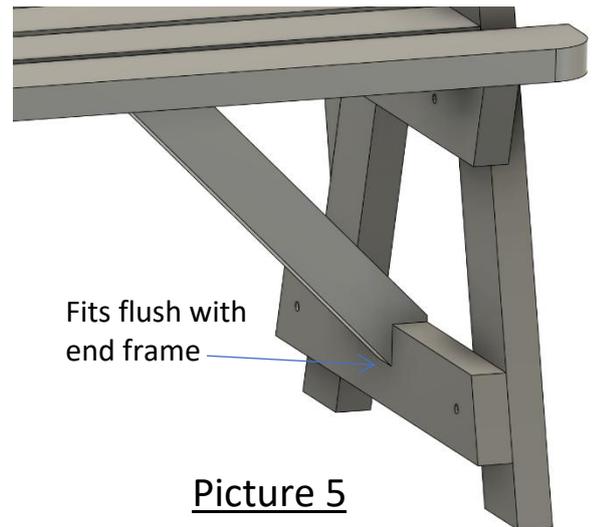

5) Take the End Frame Arms and using 4No 5.0x70mm Screws pre-drill and screw them into the End Frame as shown in Picture 6. Repeat this step for both arms.

Picture 5

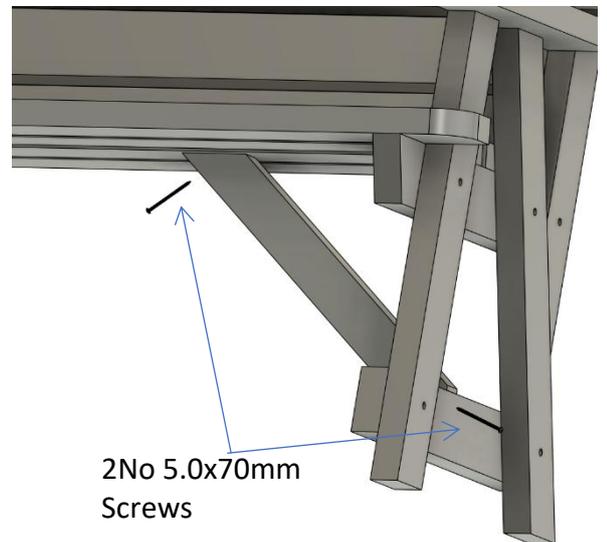


6) Once all steps have been completed the bench should look as shown in Picture 7

Picture 7



Picture 6

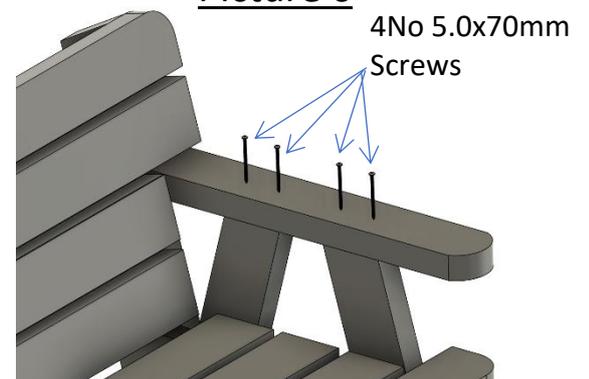


PICNIC BENCHES



Assembly Instruction for Park Bench (2-person assembly recommended)

Basic tools required: Cordless screwdriver/drill-Pozidrive no2 bit, 4mm wood drill bit, 13mm socket or spanner.


Component List:

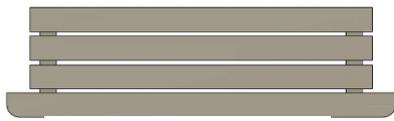

Seat Base x 1




End Frame Arms x 2

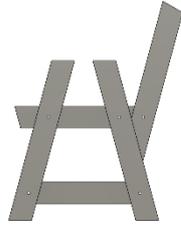

End Frame x 2



Seat Back x 1

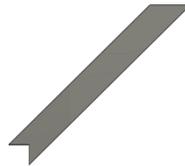


Angle Brace x 2

Fixing List:


20No 5.0x70mm Screws

- 1) Check the component and fixing list ensuring that you have all the required items.

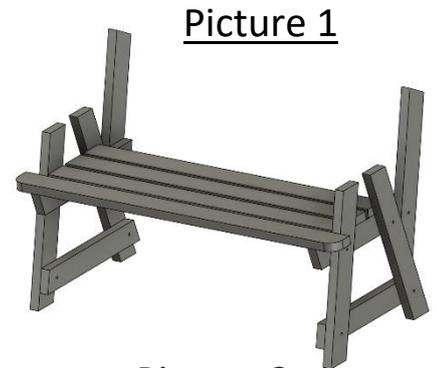

Picture 1

- 2) Stand 2 End Frames and place the Seat Base onto the end frame as shown in Picture 1, please note the end frames are handed. Making sure that the angle of the block aligns with the angle of the End Frame block as shown in further detail in Picture 2, predrill and screw 2No 5.0x70mm Screws as shown in Picture 2. Repeat this for the other side.

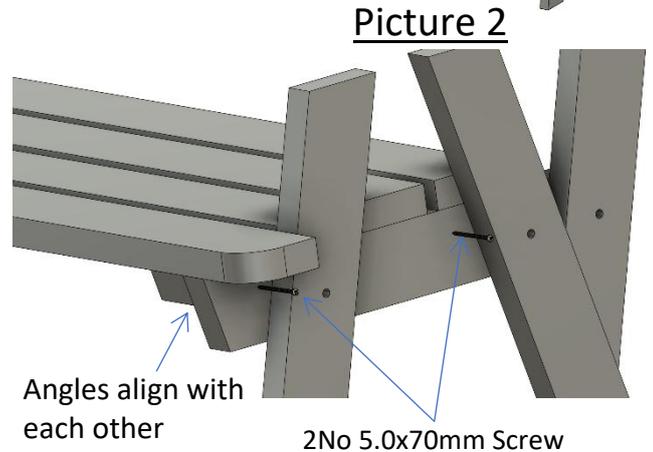


Angles align with each other

2No 5.0x70mm Screw

Picture 3

- 3) Next, take the Seat Back and align the angle of the seat block with the top of the End Frame as stated in Picture 3. Then, predrill 2 holes as stated in Picture 3 and secure using 2No 5.0x70mm Screws. Repeat this for the other side.

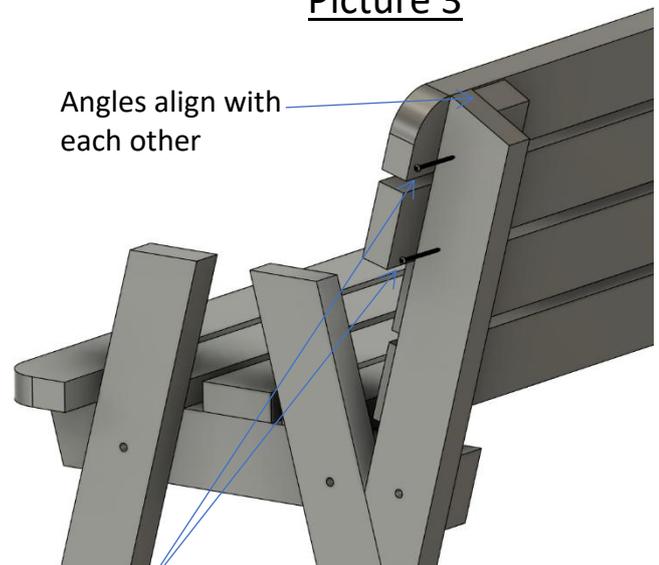

Angles align with each other

2No 5.0x70mm Screws