




Picture 4

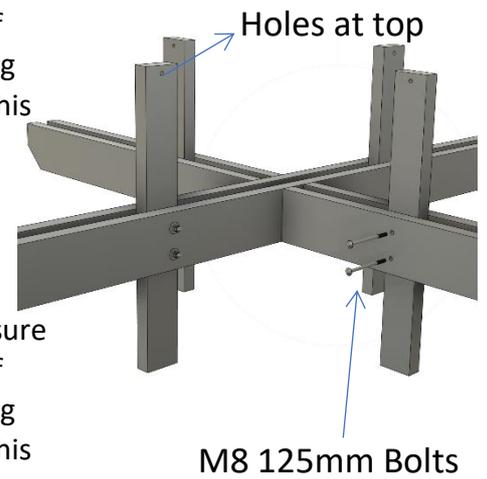

Picture 5

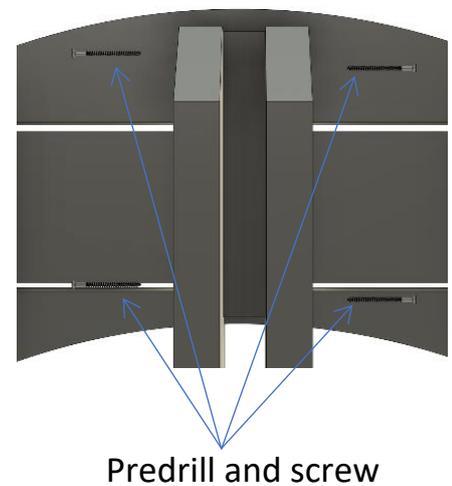

Picture 6

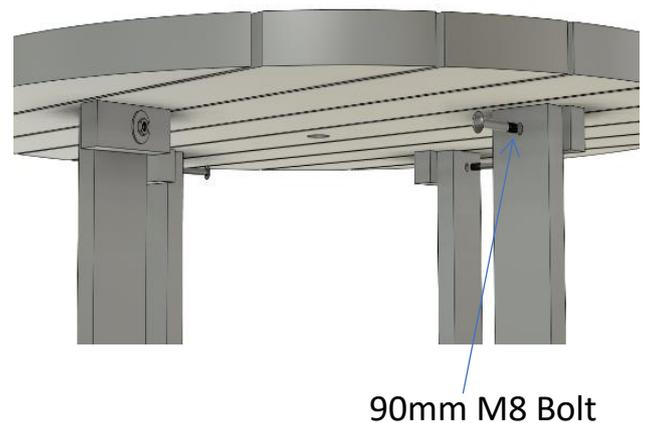

Picture 7



5) Get a Table Leg and insert it into the slot between the Half Braces making sure that the 2 predrilled bolt holes on the Table Leg align with them of the Half Braces. Once these are aligned place 2No 125mm M8 Bolts and fasten using washers, nuts and dome nuts as shown in Picture 4. Don't fully tighten at this stage. Repeat this for all 4 Table Legs.

6) Get a Table Leg and insert it into the slot between the Half Braces making sure that the 2 predrilled bolt holes on the Table Leg align with them of the Half Braces. Once these are aligned place 2No 125mm M8 Bolts and fasten using washers, nuts and dome nuts as shown in Picture 4. Don't fully tighten at this stage. Repeat this for all 4 Table Legs.

7) Take the completed seat section and attach it to the main frame, to do this you need to insert the middle block of the seat into the gap between the Half braces ensuring that the end of the Half Braces are flush with the back of the seat as stated in Picture 5. To secure, predrill through the Half Braces roughly the same positions that are stated in Picture 5 and fix 4No 70mm Screws. Repeat this for all seat sections.


8) Place the Table Top in position by aligning the table blocks with the hole at the top of the Table Legs, making sure that the Table Legs are left of the table blocks, as shown in Picture 6. Fix using 1No 90mm M8 Bolt, washer and nut per Table Leg but don't fully tighten at this stage.

Assembly Instruction for King and Supersize Excalibur Round 8-Seater Picnic Bench (2-person assembly recommended).

Basic tools required: Cordless screwdriver/drill-Pozidrive no2 bit, 4mm wood drill bit.
13mm socket or spanner.


Fixing List:

- 32No 5.0x70mm Screws
- 16No 5.0x100mm Screws
- 8No 125mm M8 Bolts & Nuts
- 4No 90mm M8 Bolts & Nuts
- 12No Washers
- 8No Dome Head Nuts

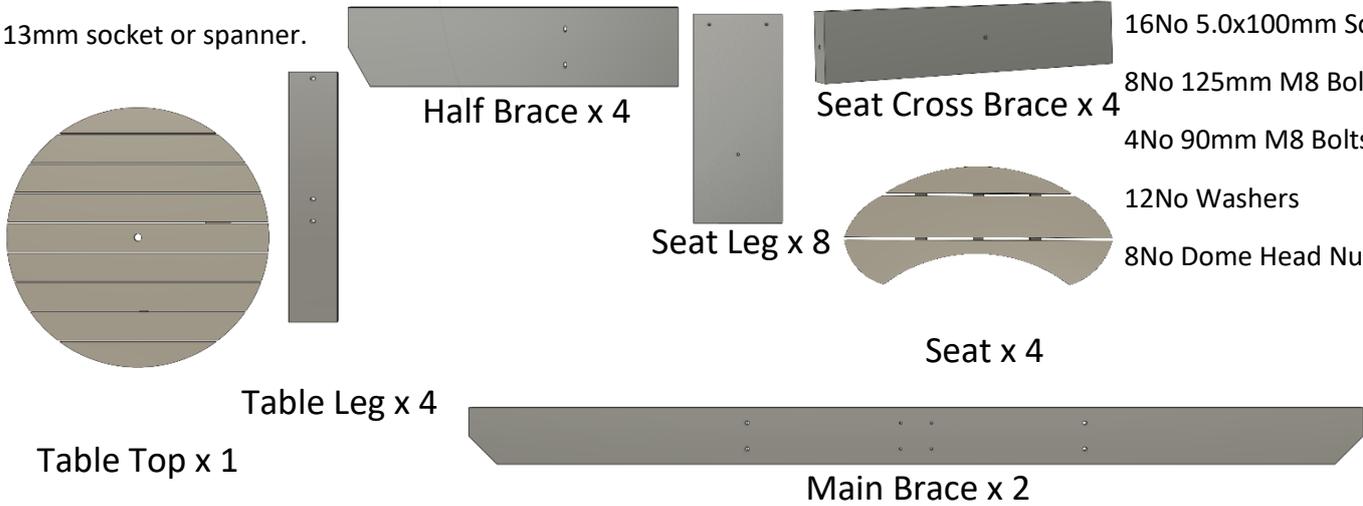


1) Check the component list, making sure that you have everything required.

Picture 1

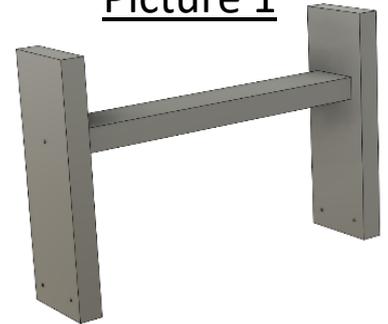

2) Firstly, you will need to make the H sections for the seats, to do this you will have to take a 5.0x100mm Screw and drill it into the predrilled seat leg hole and align with the predrilled hole of the Seat Cross Brace, don't fully tighten the screws at this stage. Repeat this step for the opposite side to make the H section as shown in Picture 1. Then repeat 4 times to make 4 H sections.

Picture 2

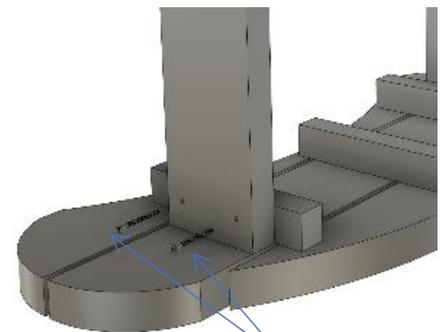


Predrill and screw

3) Once the H sections have been completed, align them as shown in Picture 2 with the Seat Leg fitting with the middle section of the seat. Then predrill the Seat Leg to secure the H section to the seat block with the hole positions being stated in Picture 2, then 2No 5.0x70mm Screws need to be drilled into these holes. Repeat this for all 4 seats.

Picture 3

4) Take 1 Main Brace and 2 Half Braces, ensuring that the chamfered ends of both braces are facing down, align the central holes of the Main Brace with the end holes of the Half Brace and fix 4No 5.0x100mm Screws to secure, as shown in Picture 3. Repeat this step for the other Main Brace.

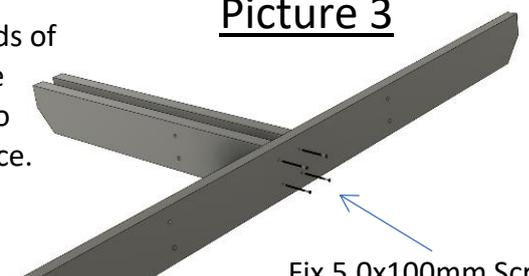

Fix 5.0x100mm Screws