





- 5) As shown in Picture 5, place 1 No M8 90mm Bolts into the drilled hole on the seat block, to secure tighten using a washer, a nut then a dome nut to further secure. Repeat this step on the other side of the seat and repeat for the other seat.

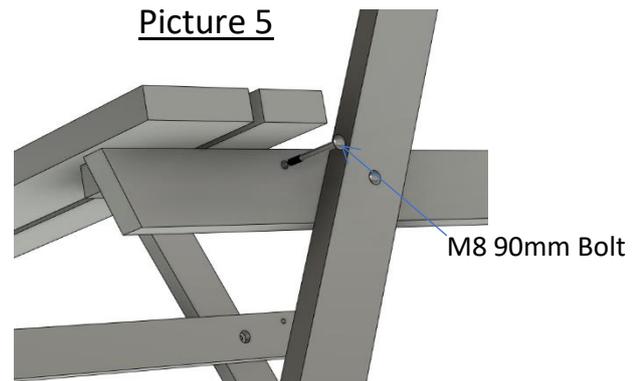

- 6) Place the Angle Brace in the middle of the Centre Cross Brace, as shown in Picture 6. Predrill and screw 2 No 5.0x70mm Screws into the Angle Brace as shown in Picture 7. Repeat this step on the other side for both Angle Braces.

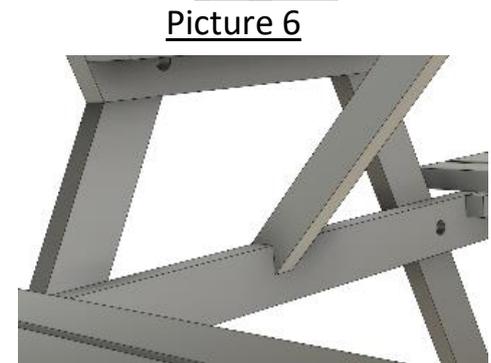

- 7) After you have completed all the steps the bench should look as shown in Picture 8.

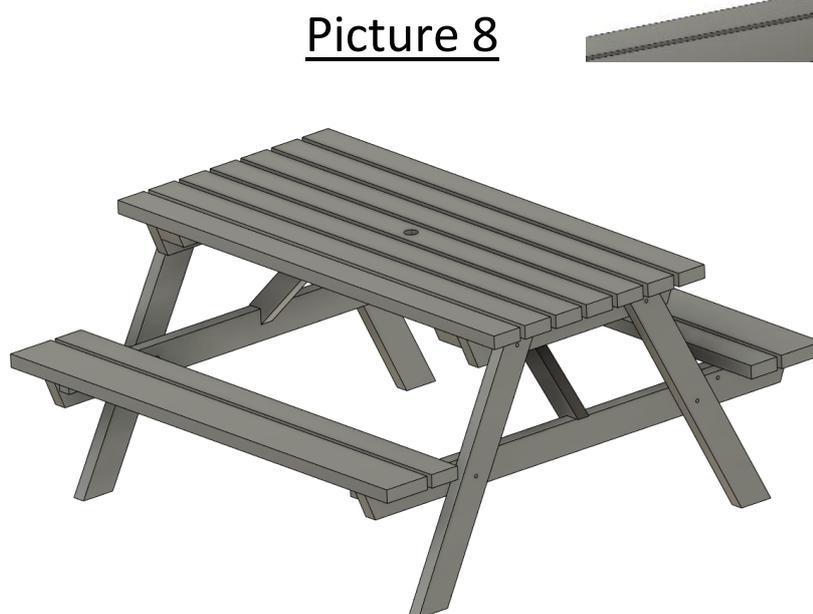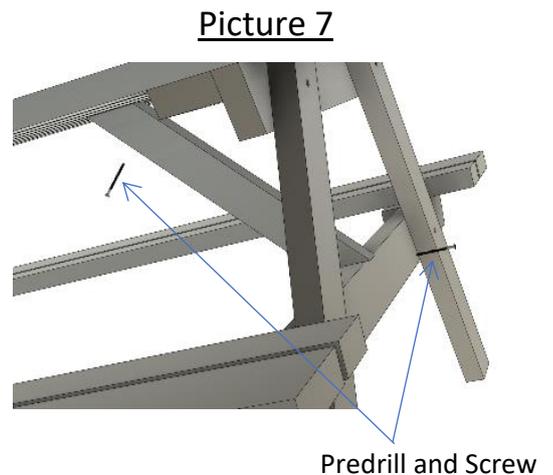

PICNIC BENCHES



Assembly Instruction for Wooden Rectangle Picnic Bench (2-person assembly recommended)

Basic tools required: Cordless screwdriver/drill-Pozidrive no2 bit, 4mm wood drill bit, 13mm socket or spanner.

Component List:



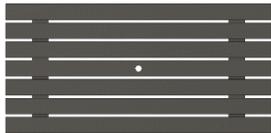


Table Top x 1

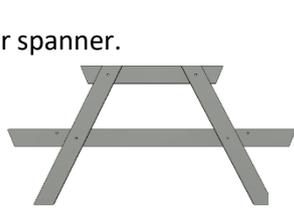

End Frame x 2

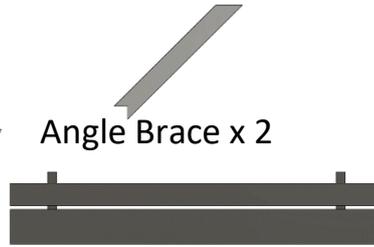

Seat x 2

Angle Brace x 2

Fixing List:

4No 5.0x70mm Screws

6No 5.0x100mm Screws


4No M8 90mm Bolts & Nuts

4No Washers

4No Dome Nuts

- 1) Check the component list, making sure that you have everything required.

Picture 1

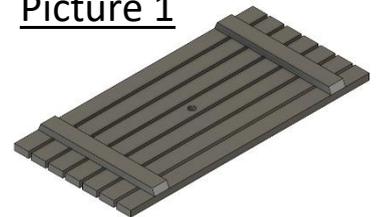


- 2) Place the table top on the floor upside down as shown as Picture 1. After this, take the end frame sections and place them on the outside of the table framework as shown in Picture 2, with more detail in Picture 3.

Picture 2



Picture 3

- 3) Pre-drill and screw 3No 5.0x100mm Screws into the End Frame as shown in Picture 3. Repeat this step for both End Frame Sections.

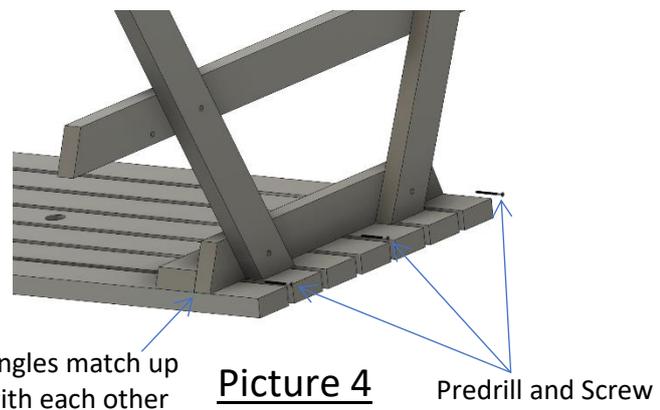

Picture 4

- 4) Flip the table over so that the bench looks like Picture 4. Then place the seats with the seat framework being on the inside of the Seat Frame.

