


- 4) Flip the table over so that the bench looks like Picture 4. Then place the seats with the seat framework being on the inside of the Seat Frame, making sure that the slope of the framework aligns with the slope of the End Frame, as shown in Picture 4, with more detail being shown in Picture 5.

Picture 4



Picture 5


- 5) As shown in Picture 5, predrill and screw 2 No 5.0x70mm Screws into the Seat framework, in order to secure the Seat to the End Frame. Repeat this step on the other side of the seat and repeat for both seats.

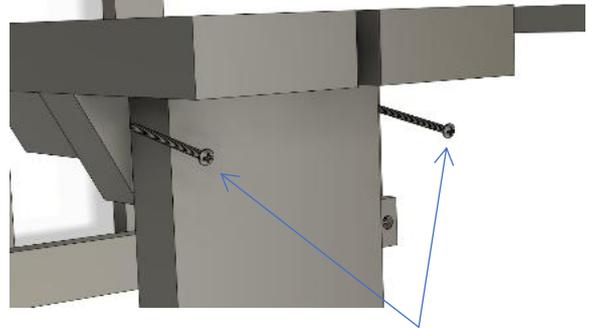

Predrill and Screw


- 6) Place the Angle Brace in the middle of the Centre Cross Brace, as shown in Picture 6. Predrill and screw 2 No 5.0x70mm Screws into the Angle Brace as shown in Picture 7. Repeat this step on the other side for both Angle Braces, only for the outside End Frames.

Picture 6

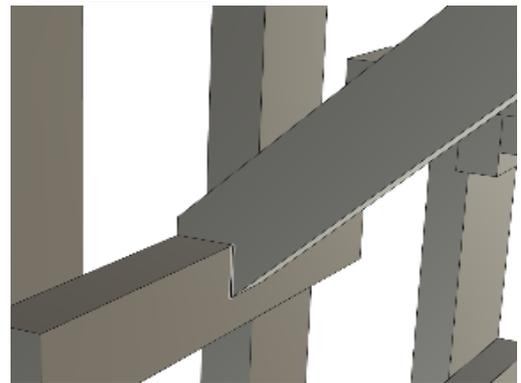

Picture 7

Predrill and Screw

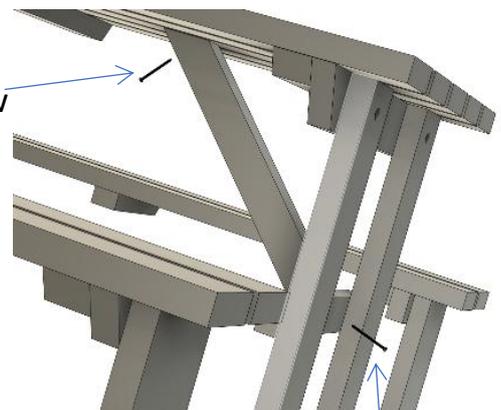

Predrill and Screw

Picture 8



PICNIC BENCHES



Assembly Instruction for Wheelchair Easy Access Picnic Bench (2-person assembly recommended)

Basic tools required: Cordless screwdriver/drill-Pozidrive no2 bit, 4mm wood drill bit, 13mm socket or spanner.

Component List:

21No 5.0x70mm Screws

Component List:






Table Top x 1

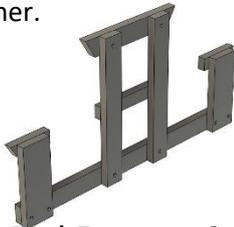

End Frame x 2

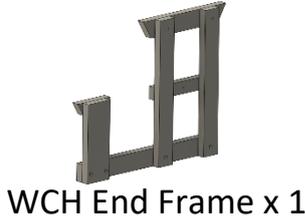

WCH End Frame x 1



Angle Brace x 2




Seat x 1



Half Seat x 1


- 1) Check the component list, making sure that you have everything required.

Picture 1

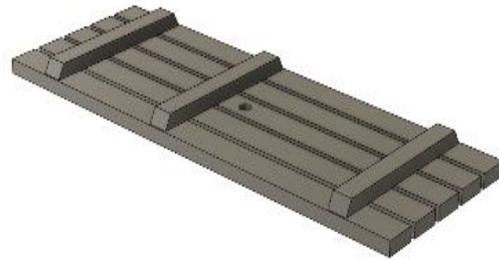


- 2) Place the table on the floor upside down as shown as Picture 1. After this, take the end frame sections and place them on the outside of the table framework as shown in Picture 2, with more detail in Picture 3. Please ensure that the middle End Frame is positioned exactly as shown in Picture 2.

Picture 2

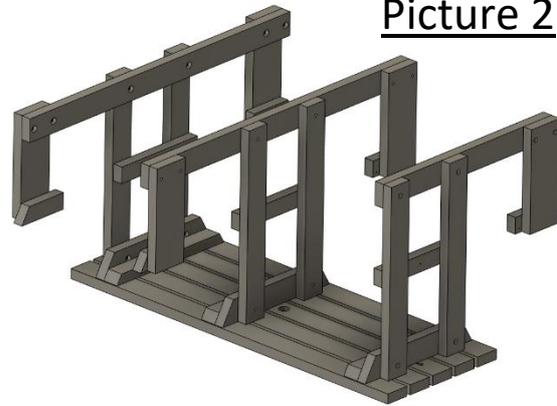

Picture 3

- 3) Pre-drill and screw 3No 5.0x70mm Screws into the End Frame as shown in Picture 3. Repeat this step for all End Frame Sections.

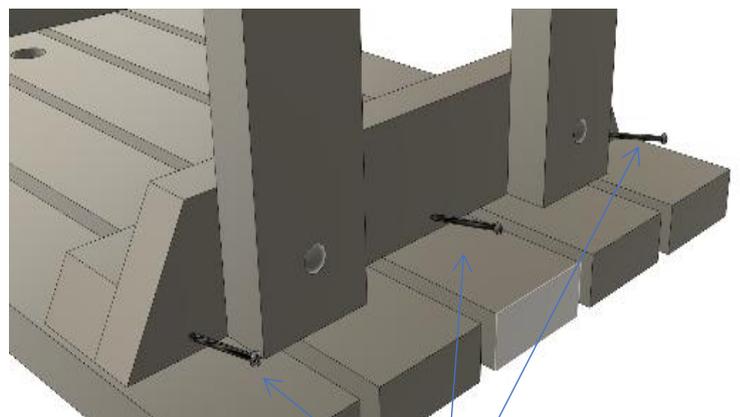

Pre-drill and Screw